



Termination Instructions

1

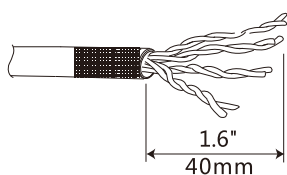


Remove 40mm (1.6") of cable outer jacket

3

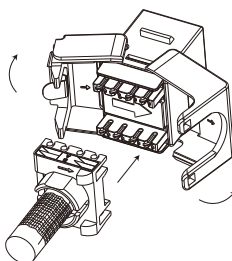


Position the termination cap on the keystone IDCs, in the correct orientation.

5

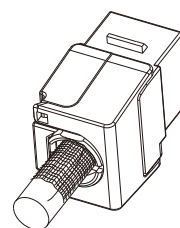


Assemble the keystone jack on face plate or patch panel

2

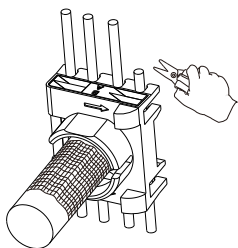

Insert the cable through the termination cap, untwist the four pairs and fan out. Following the colour code on the cap, insert the wires into their designated slots. Double check the wires are in the correct positions and then trim off the excess.

4

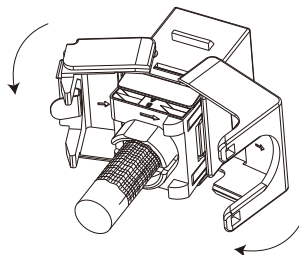

Push the termination cap down and then close the wings.